

Congratulations

on purchasing your O₂ Graphite.

In the following quick tour, you will learn about the basics and major features of your O₂ Graphite.



Table of Contents

Package contents	4
Getting to know your O₂ Graphite.....	5
Layout	5
Device components description	6
Getting your device ready	8
Installing the SIM/USIM card	8
Installing the battery	8
Installing and removing a microSD card	9
Charging the battery	9
Powering on your device	10
The Home Screen	11
Status indicator icons	12
Start menu	13
Quick List	14
Messages	15
Sending a message	15
Using Pocket MSN	16
Synchronizing with an Exchange Server	17
Personalizing your device	18
Settings screens	18
Personalizing your Home screen	18
Setting phone sounds	19

Setting the date, time, and alarm	19
Setting Profile.....	20
Setting Regional settings.....	20
Using the SIM Manager	21
Copying contacts to or from your SIM	21
Wireless features.....	22
Setting the Bluetooth® mode	22
Creating a Bluetooth® partnership	23
Pairing with a Bluetooth® headset	23
Setting up a USB connection	24
Connecting to the Internet	26
Using Call features.....	29
Making a call	29
Making emergency calls	32
Making international calls	32
Making and receiving a video call	33
Responding to a call	33
Multimedia	34
Working with pictures and videos.....	34
Service and Support.....	37
FAQs	38

Package contents



IMPORTANT To avoid damaging your Smartphone and its accessories, it is recommended that you operate this unit within a temperature range of 0 ~ 40 °C (68 ~ 86 °F).

Getting to know your O₂ Graphite

Layout



Front features



Back features




Side features



 



Bottom features

Device components description

No.	Item	Description
1	Earpiece receiver	Allows you to listen to an active call.
2	Power On/Off button / LED indicator	<p>Allows you to turn your O₂ Graphite ON/OFF. It also indicates the status of your battery, signal/network, Bluetooth®, and WLAN.</p> <p>The LED indicates the following:</p> <ul style="list-style-type: none">• Static red: Battery is charging.• Static green:WLAN is set to “On”.• Flashing green: Signal/network detected.• Flashing blue: Bluetooth® is set to “On” or “Discoverable”.• Flashing red: Event alarm/notification.
3	Front camera lens	Allows you to make yourself visible when making video calls.
4	LCD screen	Displays the menu, current time, battery power, signal strength, and current profile.
5	Left and Right soft keys	The Left and Right soft keys perform the command indicated above the button. The Left soft key unlocks the keypad, just press this button and then the Asterisk (*) key  .
6	Back key	Takes you back to the previous screen. When in message text mode, this key clears a text or character.
7	Home key	Takes you to the Home screen.
8	End key	Ends a call. Press and hold to lock the keypad.
9	Call key	Answers a call or dial a number. Press twice to redial the last number.
10	5-way joystick	<p>Push left, right, up, and down to scroll through the menu files, program icons, and folders.</p> <p>Press to launch a chosen program, list the contents of a folder, or open a file.</p>

Device components description


No.	Item	Description
11	Keypad	 Alphanumeric keys enter numbers and texts.  Asterisk (*) key enables you to switch between cases (upper/lower cases) and caps lock within a text messaging mode. In a text field, press and hold to display an entire list of input mode to make a selection.  In a text field, press this key to enter zero (0). Press and hold to enter a plus sign (+) for making international calls.  In a text field, press to enter a space. Press and hold to access the symbols menu.
12	Speakerphone	Enables you to listen to music or to talk over your Smartphone handsfree.
13	Camera lens	This 2.0 megapixel camera comes with Auto-Focus (AF) lens and flash light features.
14	Back cover	Covers the internal components such as the battery.
15	Camera button	Launches the camera functions.
16	Volume button	Adjusts the volume of your Smartphone.
17	Mini-USB sync/power connector	Synchronizes data in your Smartphone with your PC or charges your battery.
18	Microphone	Allows you to talk on an active call, say voice commands, and record sounds or voice.
19	Earphone jack	Insert a headphone to listen to music or to use your Smartphone handsfree.

Getting your device ready

Before you can start using your device, you need to install a Subscriber Identity Module (SIM)/ Universal Subscriber Identity Module (USIM card) and a charged battery. A SIM/USIM card contains your phone number, subscriber details, phonebook, and additional phone memory.


Installing the SIM/USIM card

1. Press down the back cover release latch (A) and slide it open in the direction of the arrow as shown.
2. Lift and remove the battery.
3. Insert the SIM/USIM card into the card slot with the contacts area facing down.

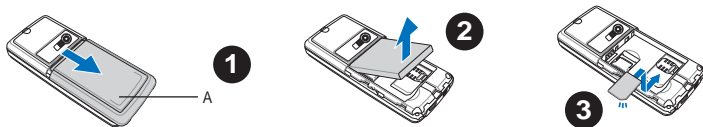

Installing the battery

1. Align the gold metal contacts on the battery with the contacts on the phone.
2. Slide the back cover into your Smartphone.

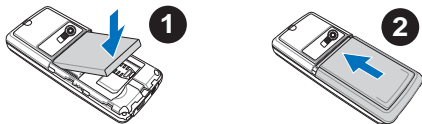


Installing and removing a microSD card

1. Remove the back cover and the battery.
2. The microSD card slot is located above the SIM card slot. Slide the metallic part of the slot to the left, and flip it open.
3. **To install a microSD card:** With the manufacturer's label side face up, and the barcode number side face down, slide the card gently into the microSD card slot.

To uninstall a microSD card: Slide the microSD card out.

4. Flip the metallic part of the cover back into its position, and slide it to the right to secure it.
5. Put back the battery and the back cover.

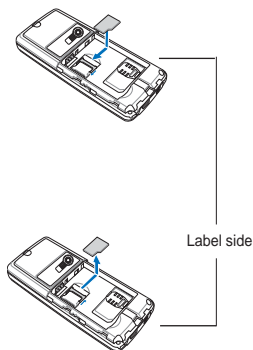


CAUTION A microSD card fits in only one orientation. DO NOT force the card into the slot!

Charging the battery

Before using the Smartphone for the first time, fully charge the battery for about eight hours. You can charge the battery whether the phone is on or off.

To charge the battery:


1. Connect the Universal AC adapter to a power source.
2. Connect the power cable plug to the Mini-USB sync/power connector.

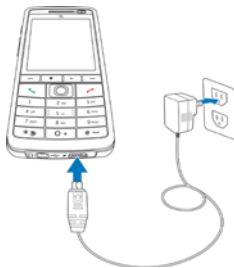



NOTE The power LED lights up red indicating that the battery is charging and turns off when the battery is fully-charged.

Powering on your device

To power ON your Smartphone


1. Press and hold the power button for about three seconds to turn ON the device.
2. If you are asked for a Personal Identification Number (PIN) code, enter the code, then press . The main display shows the idle screen.
3. Enter the PIN code (if necessary) and press **Done**. Wait for your operator and Microsoft screens to load.


To power OFF your Smartphone

1. Press and hold the **Power button**  for about three seconds until the display turns off.
2. Press and quickly release the **Power button**  and select Power off from the Quick List screen.

 


The Home screen

The Home screen automatically displays when you turn on your Smartphone or leave it idle. Scroll to any one of the items and press  to open the associated program.





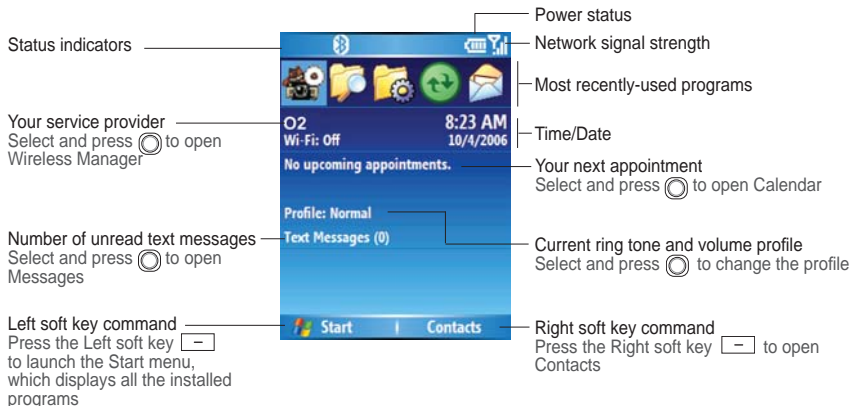



























NOTE Pressing  at any time takes you back to the Home screen.

To customize the Home screen (layout, color scheme, background image), press **Start > Settings > Home Screen**.



Status indicator icons

Status indicators appear at the top of the screen and on the Home screen. The following table lists common status indicators and their meanings.

 New e-mail or text message (SMS)	 Battery level	 Pending alarm
 New voice mail	 Sound OFF	 Bluetooth® headset connected with sound
 New instant message	 Sound ON	 Bluetooth® headset connected with sound
 Calls are forwarded	 Building connection to GPRS	 Bluetooth® enabled
 Call on hold	 GPRS available	 Roaming. This appears only if you have international roaming feature.
 Missed call	 GPRS available	 WLAN active
 Speakerphone is active	 Signal strength	 Searching for WLAN connection
 Vibrator mode is on	 No cellular phone service	 WLAN connected
 Low battery	 No signal	 3G 3G active
 Battery charging	 Searching for phone network connection	 No SIM installed
 Battery full	 Pocket MSN service notice	

NOTE Actual status indicator icons may vary from the ones represented in this guide.

Start menu

 
Your Smartphone comes with pre-installed programs accessible from the Start menu.

To use the Start menu:

1. From the Home screen, press **Start**.
2. Do one of the following:
 - Scroll to a program using the navigation keypad and press **○**.
 - Press the corresponding number on the alphanumeric keypad. For example, press **1** to open Internet Explorer and **9** to open Settings.

You can use ActiveSync™ to download programs from the Internet and add these programs to your Smartphone.

To remove programs, use File Explorer (**Start > More > File Explorer**) or Remove Programs (**Start > Settings > Remove Programs**).

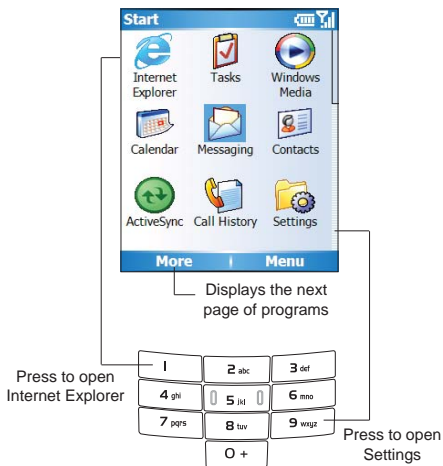




WARNING A removed program can only be reinstalled by a hard reset. To perform a hard reset, push the joystick up and press the power key simultaneously while your Smartphone is off. The screen will prompt you for confirmation. Hard-resetting will reset the device to its factory default settings and ALL DATA WILL BE LOST.


Quick List

The Quick List provides you with a list of commonly-used commands.

To use the Quick List:

1. Press and quickly release the **Power button**  to display the Quick List.
NOTE: If you press and hold too long, the Smartphone will be powered off.
2. To select a command, scroll through the list and press . You can also press the corresponding number on the keypad.
3. To return to the Home screen, press **Cancel**.

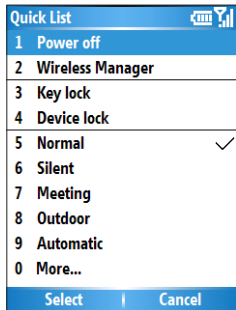


COMMAND	DESCRIPTION
Power off	Turns off the Smartphone
Wireless Manager	Turns on/off all wireless capabilities.
Key lock	Locks the keypad. To unlock the keypad, press Unlock , and then press  .
Device lock	Select how soon your Smartphone will lock after the last key press.
Normal / Silent / Meeting / Outdoor / Automatic / Headset / Car / Speakerphone	Select to make one of these profiles the current one. A check indicates the current profile.

Messages

Sending a message

Your device allows you to send and receive email, SMS, MMS, and MSN messages when connected to a network. The following describes how to compose and send a message.


Composing and sending a message

1. From the Home screen, press **Start** > **Messaging**.
2. Select the account:
 - Text Messages
 - Outlook E-mail or
 - MMS
3. Press **New**.
4. In **To**, enter the mobile number or email address of the person you want to send a message to, or press  to select the person from your contacts.

NOTE Use a semicolon (;) to separate multiple recipients.

5. Enter your message.
6. When finished, press **Send**.

NOTE If you are working offline, e-mail messages are saved in the Outbox folder and sent the next time you connect.

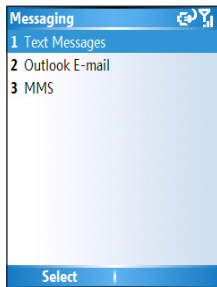


Using Pocket MSN

Pocket MSN is an instant messaging program that allows you to:

- Send and receive instant messages from your online contacts.
- Access your hotmail account to send and read emails.

NOTES


- To use MSN Messenger, you need a Microsoft .NET Passport. Go to www.passport.com to obtain a Passport.
 - GPRS will automatically reconnect when your Pocket MSN status is online.
-

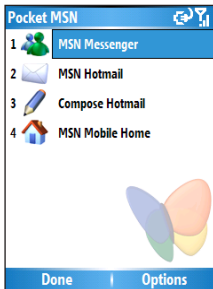

Using MSN Messenger

1. From the Home screen, press **Start > More > More > Pocket MSN > MSN Messenger**.
2. On the MSN Messenger main screen, press **Sign In**.
3. Enter the e-mail address and password for your Passport or Hotmail account.
4. Select **Save password** and press **Sign In**.

NOTE If you do not sign out of MSN Messenger, you will remain connected.

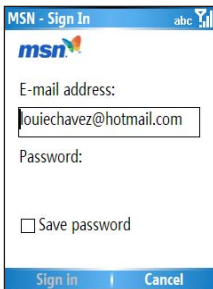

Synchronizing with an Exchange Server

Before you can synchronize your device with an Exchange Server, install the Microsoft® ActiveSync™ to your computer using the bundled O₂ Graphite Getting Started Disk. ActiveSync™ synchronizes your Smartphone with a Windows® PC. Your Smartphone comes with a preinstalled ActiveSync™.

To synchronize your device with an Exchange Server

1. From the Home screen, press **Start > ActiveSync > Menu > Add Server Source**.
2. Enter the Server Address and press **Next**.
3. Enter your user name, password, and domain name then press **Next**.
4. Select the check boxes for the information types you want to synchronize with the Exchange Server.
5. To change available synchronization settings, select the information type, and press **Menu > Settings**.
6. To change the rules for resolving synchronization conflicts, press **Menu > Advanced**.
7. Press **Finish**.

Edit Server Settings abc

Server address:

Note: This is your Outlook Web Access server address.

This server requires an encrypted (SSL) connection

Cancel | Next

NOTE Refer to the User Manual for details on changing the synchronization schedule.

Personalizing your device



You can customize the look and feel of your device according to your desired settings.

Settings screens

To display the Settings screens

1. From the Home screen, press **Start > Settings**.


NOTE: Selecting **More** will display a second screen of Settings options.

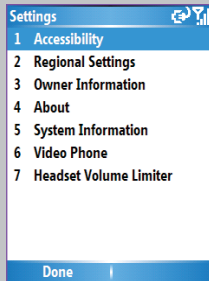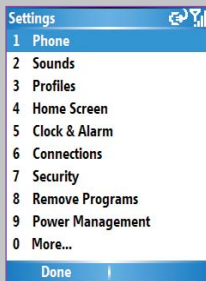

Personalizing your Home screen

To use your own image for your Home screen


1. From the Home screen, press **Start > More > Pictures & Videos**.
2. Select an image to use as background image and press **⊙**.
3. Press **Menu > Use as Home Screen**.
4. Use the **Up/Down** navigation keys to select the display area and press **Next**.
5. Use the **Left/Right** navigation keys to adjust the transparency and press **Finish**.

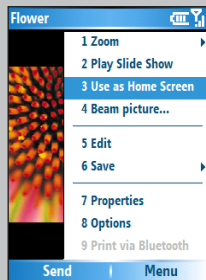


Setting phone sounds

(ring type, ring tone, and keypad sound)

To set up your phone sounds

1. From the Home screen, press **Start > Settings > Sounds**.
2. Select the item you want to assign a sound. Press  to open an item's full list of sounds.
3. When finished, press **Done**.

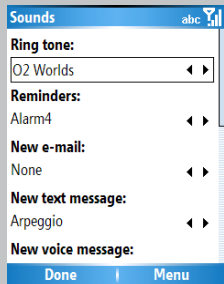

Setting the date, time, and alarm


To set the date and time

1. From the Home screen, press **Start > Settings > Clock and Alarm > Date and Time**.
2. Enter the correct information and press **Done**.

To set an alarm

1. From the Home screen, press **Start > Settings > Clock and Alarm > Alarm**.
2. Enter the correct information and press **Done**.

NOTE During synchronization, the date and time on your device is updated with the date and time on your computer.

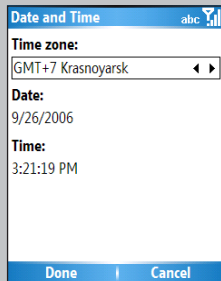


Setting Profile

To change your device profile

1. From the Home screen, press **Start > Settings > Profiles**.
2. Select the profile you want to change, press **Menu > Edit**.
3. Change the settings and press **Done**.

NOTE To restore a profile's default settings, press **Menu > Reset to default**.

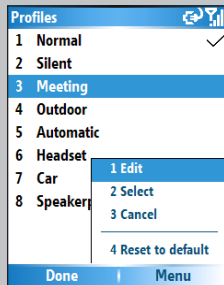

Setting Regional settings

To change regional settings

1. From the Home screen, press **Start > Settings > More > Regional Settings**.
2. In **Language**, select your desired language for the Smartphone interface and menus.
3. In **Locale**, select your current location. The Locale option automatically changes the format of the remaining options, such as date, time, and currency to reflect those used in that locale.
4. Press **Done** after you have finished making changes.

NOTE To activate the new language settings, turn off then turn the Smartphone back on.



Using the SIM Manager

Copying contacts to or from your SIM

When using a SIM card from another device, you can easily copy the contacts from your SIM to your O₂ Graphite and vice-versa.


To launch the SIM Manager, press **Start > More > Accessories > SIM Manager** from the Home screen.

To copy contacts from your SIM to your device

1. From the SIM Manager main screen, select the contact you want to copy from the list.
2. Press **Menu > Copy to Contact**.
3. Press **OK** for confirmation.

To copy contacts from your device to your SIM

1. From the SIM Manager main screen, press **Menu > Copy Contact to SIM**.
2. Select the contact you want to copy from the list.
3. Press **Select** for confirmation.

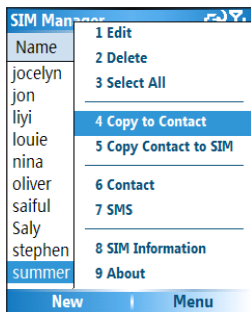

NOTE If the contact has more than one phone number in the list, select the one to copy from the list and press **Select**.

To copy SMS from SIM to your device


1. From the SIM Manager main screen, press **Menu > SMS**.
2. From the SMS screen, tap **Menu > Copy to Text Message**.
3. Click **OK** to confirm, and click **Cancel** to go back to the SIM Manager main screen.

Wireless features

Bluetooth® is a short-range wireless communications technology that allows you to communicate with other devices, such as headsets, printers, PCs, GPS receivers, and other users' mobile devices. Devices with Bluetooth® capabilities can exchange information without requiring a physical connection. Unlike infrared, you do not need to line up devices to exchange information through Bluetooth®. The devices only need to be within a range of about 10 meters (30 feet) in an open space environment. You can even beam information to a device in a different room, as long as it is within the specified range.

Setting the Bluetooth® mode

To set the Bluetooth® mode:

1. To enable the Bluetooth® connection, you can either:
 - Press **Start** > **Settings** > **Connections** > **Bluetooth** from the Home screen, OR
 - Press and quickly release the **Power button**  to display the Quick List screen. Select **Wireless Manager** > **Settings** > **Bluetooth Settings**.
2. Select **On**, **Off**, or **Discoverable**, and press **Done** .



NOTES

- Setting your Bluetooth® connection to **Discoverable** makes your phone detectable by other Bluetooth® devices within a 10-meter range.
 - The Bluetooth® device setup instructions provided in this section may differ from other Bluetooth® devices. If the instructions in this guide differ from the documentation that comes with your Bluetooth®-enabled device, follow the latter.
-

Creating a Bluetooth® partnership

Before your Smartphone can communicate with another device, you need to create a partnership between your Smartphone and the other Bluetooth®-enabled device. Your Smartphone can create partnerships with up to ten Bluetooth® devices.

To create a Bluetooth® partnership

1. Ensure that the two Bluetooth®-enabled devices are within a 10-meter range and that both are discoverable.
2. From the Home screen, press **Start > Settings > Connections > Bluetooth**.
3. Press **Menu > Devices > Menu > New**. Your Smartphone searches for and displays the list of Bluetooth®-enabled devices.
4. Select the device with which you want to create a Bluetooth® partnership, and press **Next**.
5. Enter a Passkey between 1 to 16 characters, and press **Next**.
6. Enter the same Passkey on the other device.

NOTE Once you create a partnership, the devices need not to be discoverable to beam information between them; Bluetooth® needs only to be turned on.

Pairing with a Bluetooth® headset

1. From the Home screen, press **Start > Settings > Connections > Bluetooth** and set Bluetooth® on your phone to **Discoverable**.
2. Turn on your Bluetooth® headset and bring it to within 30 meters of your phone.
3. Put your Bluetooth® headset into pairing mode. Refer to your Bluetooth headset's user manual for instructions.
4. On your phone, press **Menu > Devices > Menu > New**.
5. Select the Bluetooth® headset on the Add Devices list and press **Next**.
6. Enter the passkey provided in the headset user manual. The phone will now pair with the headset.
7. Set the Bluetooth® mode on your phone to **On** and you are ready to talk hands free.

Setting up a USB connection

Modem Link allows you to use your Smartphone as an external modem for your PC or another device (e.g. a PDA) using a USB connection.

To set up a USB connection

1. Make sure that your phone is not connected to another device and ActiveSync™ is disabled on your PC. On your ActiveSync™ in your PC, go to **File > Connection Settings** and deselect the **Allow USB connections** checkbox.
2. From the Home screen, press **Start > More > Accessories > Modem Link**.
3. In **Connection**, select USB.
4. To set up a GPRS connection, enter the Access point name you obtained from your Internet Service Provider.
5. Connect your Smartphone to the PC using the USB sync cable.
6. Press **Activate** then press **Done**.
7. Insert the Getting Started Disk into the CD-ROM drive of your PC. The installation of the USB driver will start automatically. If needed, click Browse and choose the CD drive and root folder where the modem driver is located on the CD.
8. Click **Next** and wait for the installation to complete.
9. Press **Finish**.
10. On your PC, click **Start > Control Panel > Network Connections > Create a new connection**.

11. In the **New Connection Wizard**, select these items for the following successive Wizard pages:

WIZARD PAGE	OPTION TO SELECT/ACTION TO DO
Network Connection Type	[Connect to the Internet]
Getting Ready	[Set up my connection manually]
Internet Connection	[Connect using a dial-up modem] Note: In the succeeding pages, type the name of your ISP, and the phone number.
Connection Availability	[Anyone's use] or [My use only]
Internet Account Information	Type the ISP account name and password

NOTE

Click **Next** to go through the pages in the New Connection Wizard.

12. Click **Finish** to complete the setup.

NOTE In the dialer, click **Disconnect** before deactivating the phone or unplugging the USB cable. To deactivate the modem link, press **Start > More > Accessories > Modem Link > Deactivate**.

Connecting to the Internet

You can set up an Internet or a network connection to do activities such as browse the Internet or intranet, send and receive emails and instant messages, and synchronize information using ActiveSync™.

To connect to the Internet

From the Home screen, press **Start > Settings > Connections** to launch the Connections screen. Connections settings allow you to set up Dial-up, Virtual Private Network (VPN), Bluetooth, Proxy, and General Packet Radio Service (GPRS) connections, so you can connect to the Internet or your corporate network.

Dial-up connection

Every network connection is different. You should gather all the relevant information or network settings before starting this process.

1. From the Home screen, press **Start > Settings > Connections > Dial-up**.
2. Press **Menu > Add**.
3. Enter the appropriate information.

NOTE In **Connects to**, select **The Internet** to connect directly to the Internet; **Work** to connect to your corporate network; **WAP Network** to connect to a Wireless Application Protocol network; or **Secure WAP Network** to connect to secure WAP sites, such as a bank.

4. Press **Done**.

GPRS, Proxy, and VPN connections

You can create GPRS, Proxy, and VPN connections using the same procedure as that for a Dial-up connection.

GPRS connection

GPRS is a high-speed transmission through the mobile phone network, which provides permanent online connection. To use GPRS to connect to the network, you need to apply for GPRS service with your Mobile Service Operator.

Proxy connection

If you are connected to your Internet Service Provider (ISP) or private network during synchronization, your Smartphone should download the proper proxy settings from your PC. If these settings are not on your PC or need to be changed, ask your ISP or network administrator for the proxy server name, server type, port, type of Socks protocol used, and your user name and password. A proxy connection is used to access the Internet using an existing connection to your corporate network.

VPN connection

A VPN connection helps you to securely connect to servers, such as a corporate network, using an existing Internet connection. Ask your network administrator for your user name, password, domain name, TCP/IP settings, and host name or IP address of the VPN server.

Changing option settings

The Options screen enables you to specify the number of redial attempts, time to wait before disconnecting, and how your phone connects to the network.

To access the Options screen

1. From the Home screen, press **Start > Settings > Connections**.
2. Press **Menu > Advanced > Menu > Options**.

Adding a URL exception

Some companies use periods in their intranet URLs (for example, intranet.companyname.com). A Work URL exception tells Internet Explorer Mobile to look on the Work network to find the URL instead of searching the Internet.

To add a URL exception

1. From the Home screen, press **Start > Settings > Connections**.
2. Press **Menu > Advanced > Menu > Work URL Exceptions**.
3. Press **Menu > Add**.
4. In **URL Pattern**, enter the URL, and press **Done**.




NOTE Separate multiple URLs with a semicolon (;). You should not create URL exceptions for URLs on the Internet.

Using Call features

Making a call


Calling from the Home screen

To call from the Home screen

1. On the Home screen, enter the phone number you want to call.
If you enter the wrong number, press  to delete the last digit; press and hold to delete all digits.
2. Once you have entered the number, press  to make the call.
3. Press  to end the call.



NOTES

- As you enter a phone number, the Smartphone searches Contacts, Call History, and the Speed Dial lists to find a matching name or number. Use the Up/Down navigation keys to select a name or number on the list.
 - To redial the last number called, press  twice.
-

Calling a Contacts entry

To call a Contacts entry

1. On the Home screen, press **Contacts**.
2. Use the Up/Down navigation keys to select the contact name to call.

TIP To narrow your search, enter the first few letters of the contact's name.

3. Press  to make the call. You can also press , which will display a set of options.




NOTE By default, the contact's mobile telephone number is dialed first when you make a call from Contacts unless you specify otherwise.

To change the default number for a Contact

1. On the Home screen, press **Contacts**.
2. Select the contact whose default phone number you want to change.
3. Use the Left/Right navigation keys to change the default number. The letter to the right of the contact's name indicates the default number — m (mobile), w (work), or h (home).

Calling a number from the Call History list

To make a call from the Call History list

1. On the Home screen, press  or press **Start > Call History**.
2. Select the number or name to call, and press . You can also press , which will display a set of options.



Calling using speed dial

You can create speed dials for frequently-called phone numbers or accessed items. You may choose Speed Dial entries from 2-99. Speed Dial 1 is reserved for voice mail access. You can create a Speed Dial for a phone number, a program on the Start menu, an E-mail address, or URL address that is stored in your phone's Contacts.

NOTES

- Assign a speed dial key to a phone number before using the speed dial feature.
 - Create a speed dial only for a phone number, e-mail address, or Web page address that is stored in your phone's Contacts. You cannot create a speed dial for a contact stored in the SIM card.
-

To create a speed dial for a phone number, e-mail address, or URL address


1. From the Home screen, press **Start > Contacts**.
2. Select a contact and press  to view the contact details.
3. Select the phone number, e-mail address, or URL address you want to assign a speed dial. Press **Menu > Add to Speed Dial**.
4. Enter appropriate details in Name, and Keypad assignment . In **Keypad assignment**, use the Left/Right navigation keys to select, or press  to view the full list of choices.
5. Press **Done**.

NOTE To quit at any time during this process, press **Menu > Cancel**.

To make a call using speed dial

On the keypad, press and hold the speed dial's assignment. If the keypad assignment consists of two digits, press the first digit then press and hold the second digit.

To create a speed dial for an item on the Start menu

1. On the Home screen, press **Start**.
2. Select an item and press **Menu > Add Speed Dial**.
3. Enter the appropriate details in Name, and Keypad assignment . In **Keypad assignment**, use the Left/Right navigation keys to select, or press  to view the full list of choices.
4. Press **Done**.

Making emergency calls

Calls to emergency service numbers can be made even if you have locked the SIM card or your phone.

 

To place an emergency call

Enter the emergency number, and press **Send**.

Making international calls

To make international calls, you must first enter the international prefix (+), followed by the country code and the rest of the phone number.

To place an international call

1. Press and hold  on the keypad to enter a plus sign.
2. Enter the phone number with the country code, area code, and phone number. Press .


Making and receiving a video call

Your device allows you to make and receive calls with live images.


To make a video call

1. On the Home screen, press **Contacts**.
2. Select a contact.
3. Press **Menu > Video Call**.

To answer a video call

To answer a video call, press **Answer** or .


To ignore a video call

To ignore a video call, press **Ignore** or .

Responding to a call


When you receive a call, the screen displays the caller's name and phone number. If the caller is not in your Contacts list, the screen displays the number only. When you receive a phone call, you have the option to answer or to ignore it.

To answer a call

Press **Answer** or .

To ignore a call

Press **Ignore** or .

NOTE Selecting **Ignore** or  will send the caller to your voice mailbox if it is enabled. If it is not, the caller will hear a busy tone.

Multimedia


Working with pictures and videos

Using Pictures & Videos

The Pictures & Videos program allows you to work with pictures and video clips on your phone. After you have taken the pictures and video clips, you can organize, edit, beam or send them using a messaging program.

To launch the Pictures & Videos program, press **Start > Pictures & Videos**.

TO	DO THIS
Take a picture or a video clip	To take a picture, do one of the following: <ul style="list-style-type: none">• Select Camera > Menu > Change Mode > Camera Mode.• Press and hold the Camera button. To take a video clip, select Camera > Menu > Change Mode > Video Mode .
Set the picture scene	Set to Camera Mode . Select Menu > Scene . You may either select Auto or Night scene.
Set the picture/video size	Set to either Camera Mode or Video Mode . When you have chosen the mode, select Menu > Picture (or Video) Size to select the picture/video size.
Set the picture quality	Set to Camera Mode . Select > Menu > Picture Quality . Choose from Normal, Fine, or Super Fine .

TO	DO THIS
Set the flash mode	Set to Camera Mode . Select Menu > Flash Mode . Choose from Off , On , or Auto .
Zoom a picture	Set to Camera Mode . Select Menu > Zoom .
Set the timer for taking a picture	Set to Camera Mode . Select Menu > Self-Timer .
Save a picture or a video clip	Set to either Camera Mode or Video Mode . Select Menu > Save to . You can save a picture or a video clip in a storage card or in the main memory.
Set the effect on a picture or on video clip	Set to either Camera Mode or Video Mode . Select Menu > Effect .
Set the advanced settings	Set to either Camera Mode or Video Mode . Select Menu > Advanced .
View a picture or a video clip	Select the picture or video clip you want to view and press View .
Delete a picture or a video clip	Select the picture or video clip you want to delete and press Menu > Delete .
View your pictures as a slide show	Press Menu > Play Slide Show .
Set a picture as the Home screen	Select the picture you want to use as the Home screen and press View > Menu > Use as Home Screen . Use the Left/Right navigation keys to select the display area and press Next . Adjust the transparency and press Finish .
Send a picture or a video clip	Select the picture or video clip you want to beam and press Menu > Beam . Select the device to which you want to send and press Beam .
Change the name of a picture	Select a picture and press View > Menu > Save > Save as . Change the name in the Name field.
Set the screensaver to play when the phone is connected to a PC and idle for more than 2 minutes	Press Menu > Options > Slideshow . Select the viewing orientation (Landscape or Portrait pictures), and press  to mark the checkbox confirming that you want to set the screensaver. Press Done to confirm.

TO	DO THIS
Edit a picture	<p>Select the picture you want to edit and press View. Press Menu > Edit, and do the following:</p> <ul style="list-style-type: none"> • To rotate the picture 90 degrees, press Menu > Rotate. • To crop the picture, press Menu > Crop. Use the navigation pad to position the first corner of the cropping area and press Next. Position the second corner and press Finish. To start over, press Previous. • To automatically readjust the brightness and contrast levels of the picture, press Menu > Auto Correct. <p>Press Menu > Save > Save As, to save the edited picture with a different name or to a different location.</p>
E-mail a picture or video clip (You must already be set up to send and receive messages - see 6.2 Setting up accounts)	<p>Select the picture or video clip you want to send and press Menu > Send. Select Outlook E-mail and press Select. A new e-mail message is created with the file attached. Enter the recipient's e-mail address, the subject, and your message; and press Send.</p>
Send a picture or video clip using MMS	<p>Select the picture or video clip you want to send and press Menu > Send. Select MMS and press Select. A new MMS message is created with the file attached. Enter the recipient's mobile phone number and the subject. Scroll down to Insert Audio (available only for pictures), press ⊙, and select an audio clip to attach. Scroll down to Insert Text, enter your message; and press Send.</p>
Set a picture size to use when e-mailing pictures	<p>Press Menu > Options > General. Select the picture size.</p>
Set whether pictures are rotated clockwise or counter-clockwise.	<p>Press Menu > Options > General. Select to rotate either Right (clockwise) or Left (counter-clockwise).</p>

Service and Support

For more information about your O₂ PDA Phone, answers to Frequently Asked Questions, documentation and software upgrades, please visit www.seeO2.com. You can also register online to receive information on updates and promotions.

Should you have further enquiries or feedback, log on to www.seeO2.com/contactus to fill in the relevant forms, and our online support team will get back to you.

Alternatively, you may call us for assistance. For a complete list of customer service phone numbers, refer to your **O₂ Warranty Card**.

FAQs

Why does my phone not turn on when I press the power button?

Either you did not press the key long enough, or the phone has shut down because the battery power level is too low to make calls. Fully recharge the battery.

How do I suspend the screen display or wake up the phone?

Press the power button briefly to suspend the screen display. If the screen display is off, press the power button to wake up your phone.

My phone displays 'Insert SIM', what does this mean?

You must insert the SIM card before you can use the phone. If it is already installed, remove and clean the blank area with a dry cloth, then insert again.

My phone displays 'INVALID or missing SIM card', what does this mean?

The phone is SIM-locked and will not accept the inserted SIM card. Insert the correct SIM card or contact your network operator.

My phone displays 'EMERGENCY ONLY', what does this mean?

Your SIM card is not properly installed or configured, or you are out of network range.

My phone displays 'NO NETWORK', what does this mean?

You are outside network range or there is no clear path to the transmitter. If you are inside a building, try moving towards a window.

Some calls are not processed. What is wrong?

A call bar has been set to restrict phone usage. Check the call barring status and cancel as necessary.

Someone else is receiving my calls. What is wrong?

The phone has been set to forward your calls to another number. Cancel call forwarding as necessary.

Can I send and receive emails and surf the Mobile Internet on my phone?

Yes. Your phone has Web capability, which means that you can access the Internet from your phone. For sending and receiving emails, please refer to the user manual or contact O₂ Customer Service.

Where can I check why my phone has gone wrong?

Tap **Start > Programs > Self Diagnostics** to run diagnostic tests on your system. Otherwise, have your warranty card and phone ready and contact your local dealer.